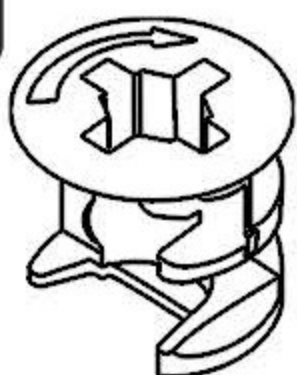

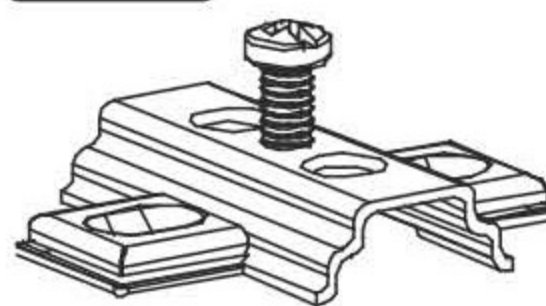

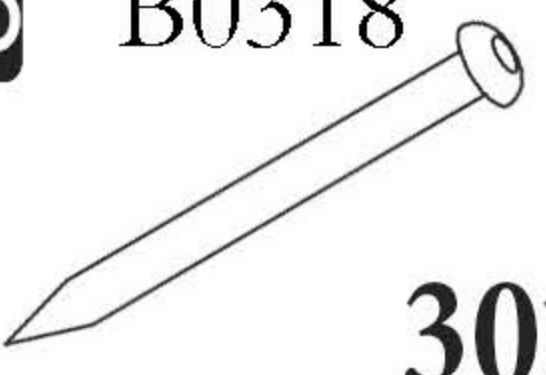
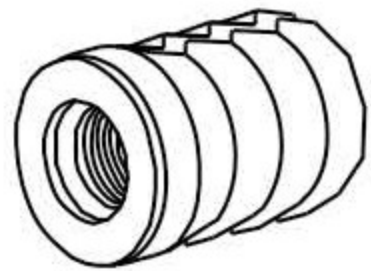


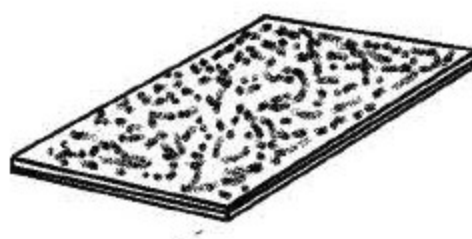
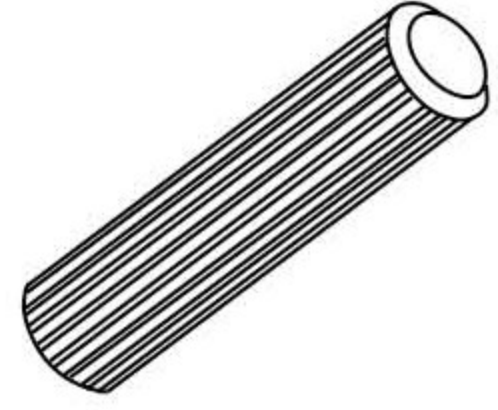

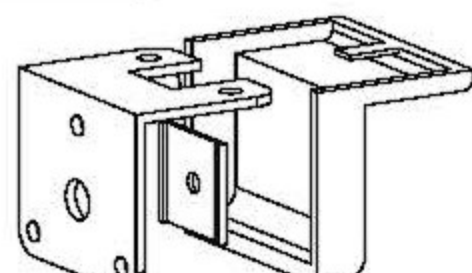



LISTE DES ACCESSOIRES :

Utiliser un serre-joint pour le montage des chevilles A70



A01  12x	B0502	A02  12x	B0504	A13  4x	B0105	A12  8x	B0305	A28  30x	B0318
A70  12x	B0501	A15  4x	B0101	A10  24x	B0301	A41  4x	B1601	 12x	B0503
A08  2x	B0317	A41  2x	B1303	A09  2x	B0306				

